




**JAN-RO**  
clotheslines

***SPECIFICATIONS***

- » DRYING SPACE: ***20m***
- » NUMBER OF LINES: ***10***
- » FRAME DIMENSIONS: ***1940cm x 1060cm***
- » MAXIMUM LOADING: ***38kg***
- » WARRANTY: ***12 months***

***JAN-RO is a unique folding washing line:***

- » A SPACE SAVER
- » IT'S AN ENERGY SAVER
- » ENVIRONMENTALLY FRIENDLY
- » EASILY ASSEMBLED
- » OPTIONAL CANOPY ROOF
- » POWDER COATED FRAME & STAINLESS STEEL BRACKETS

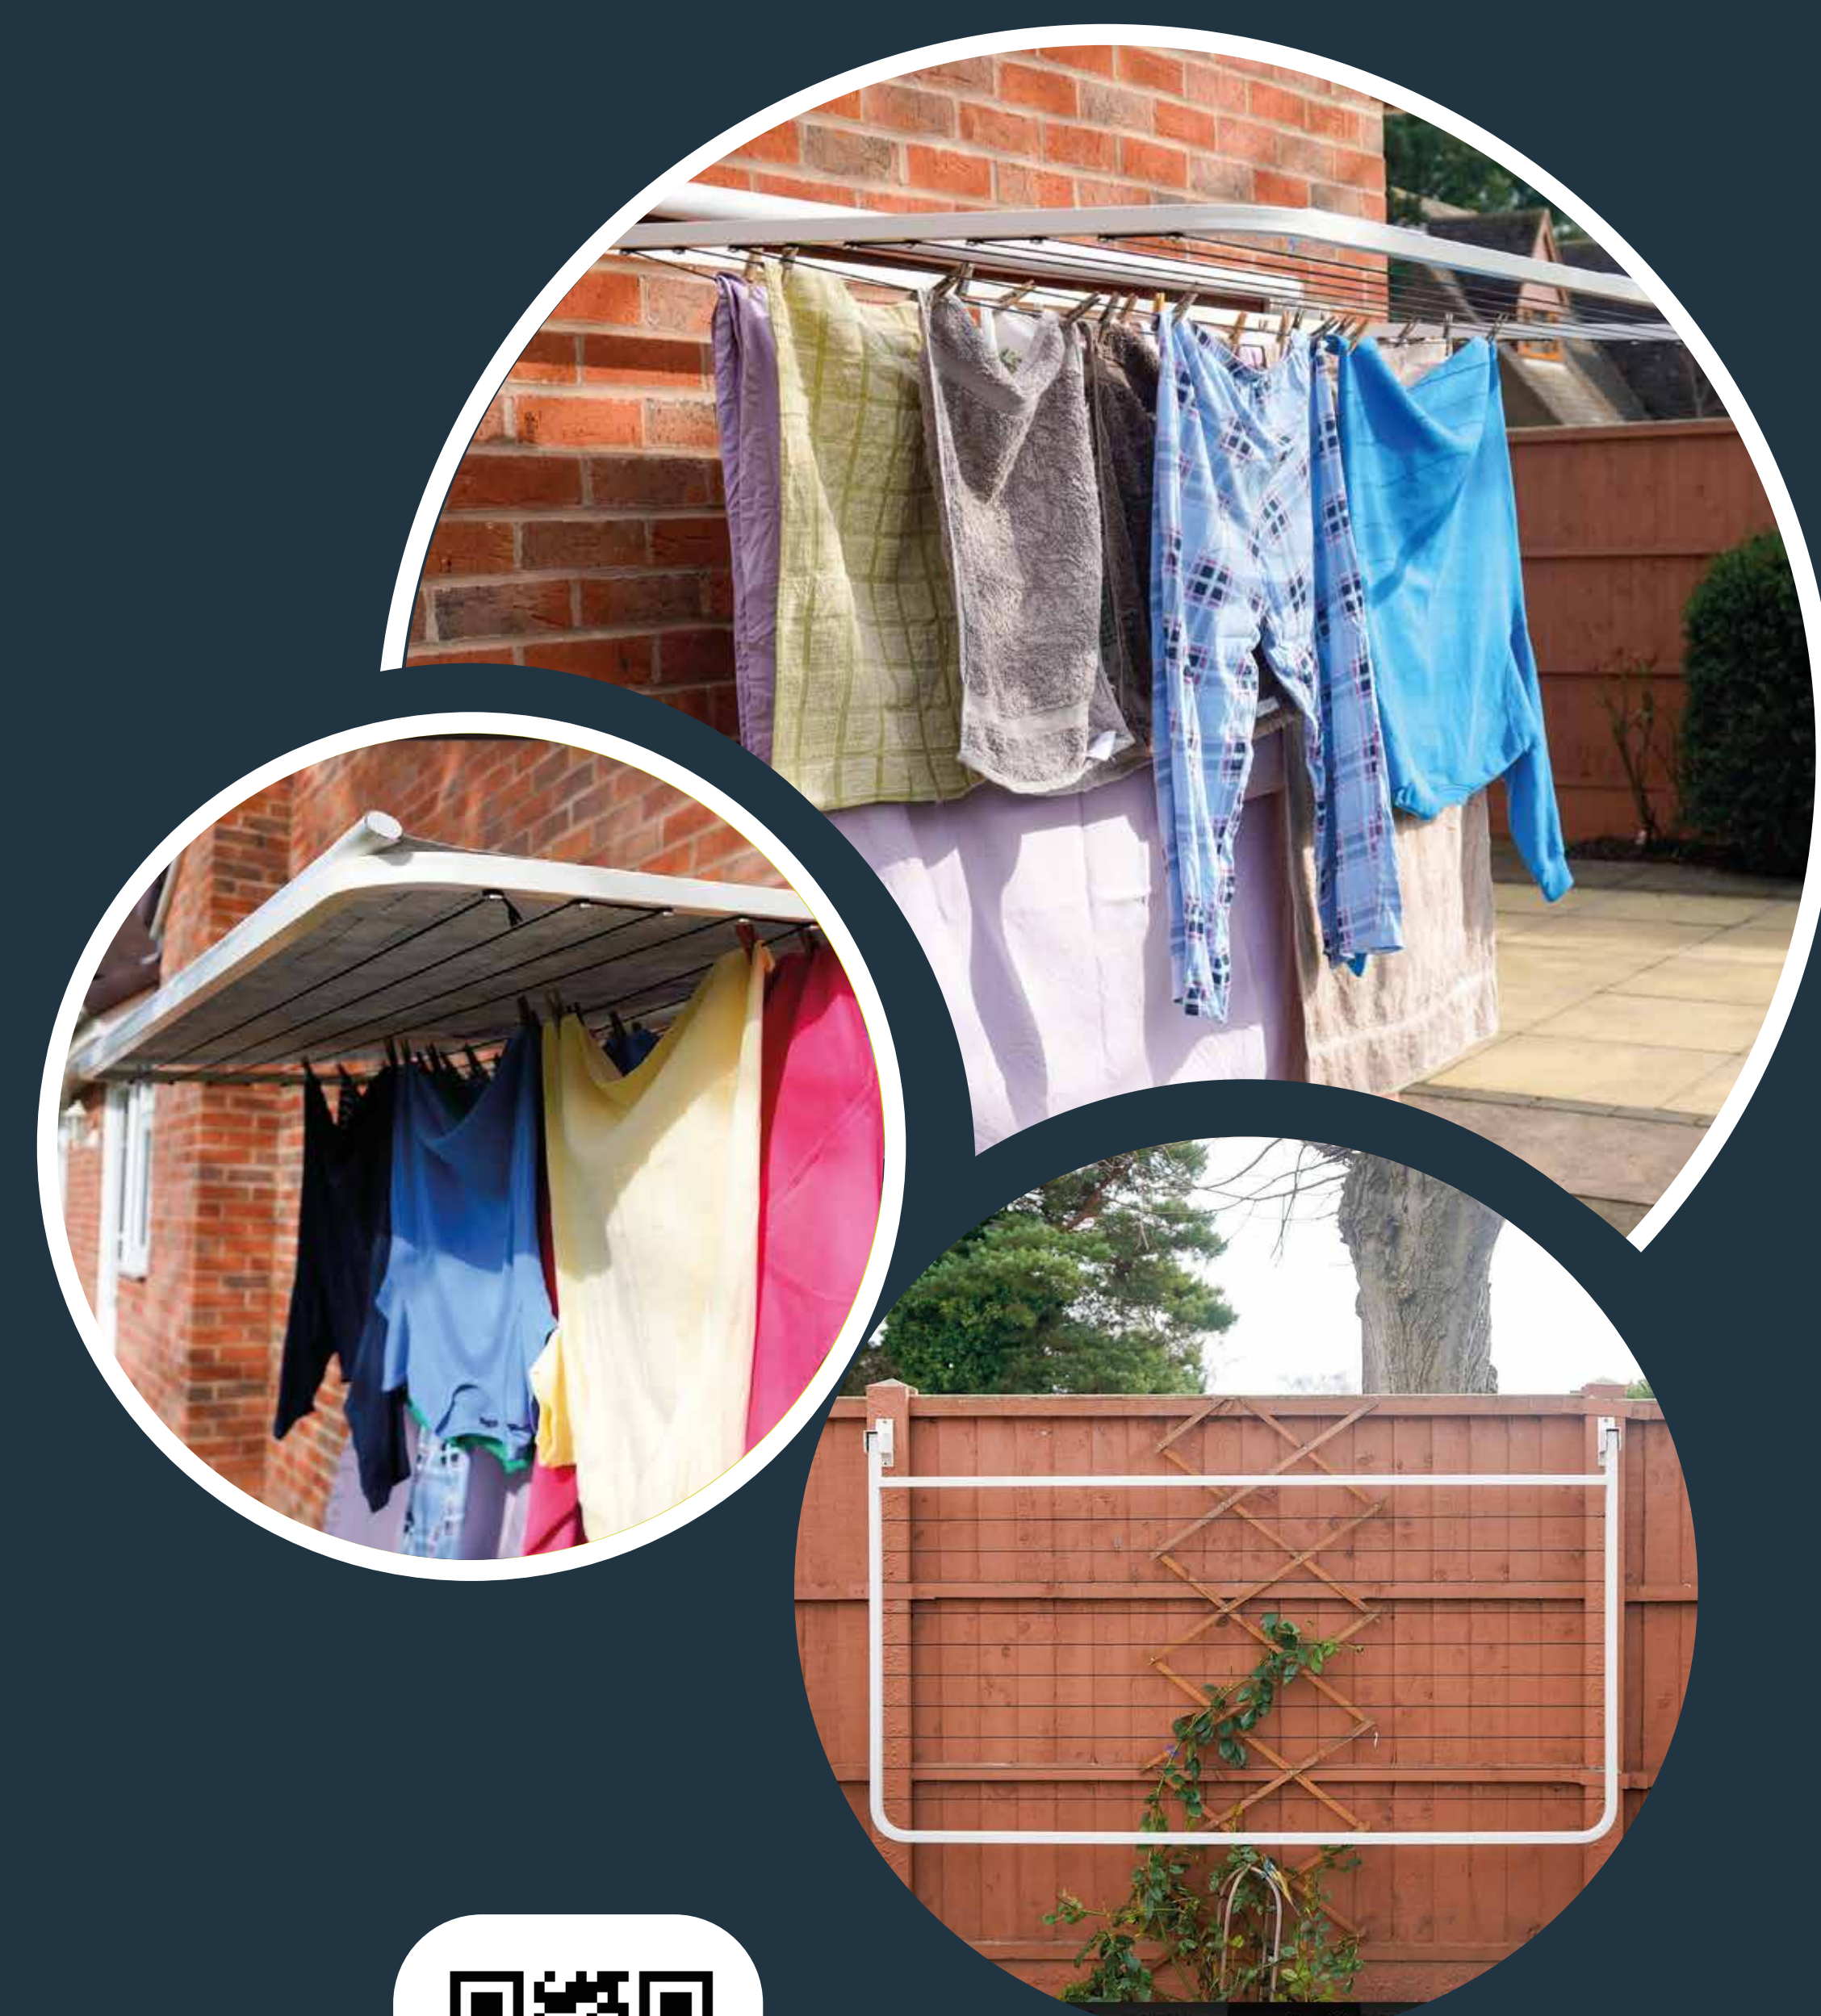

***Designed and manufactured in the Black Country, UK [www.jan-ro.co.uk](http://www.jan-ro.co.uk)***





# ***JAN-RO WASHING LINE INSTALLATION INSTRUCTIONS***

It is recommended that a minimum of two people install the washing line.

## ***YOU WILL NEED:***

- 1X 6mm masonry drill (which will achieve 100mm hole depth)
- 1X Spirit level
- 1X Hammer drill (for bricks)
- 1X SDS drill (for concrete)
- 4X 100mm bracket screws

## ***INCLUDED IN PACKAGING:***

- 1X Clothesline frame
- 2X Wall brackets
- 2X Thumbscrews (please do not dispose of these, you may need them at a later date)

## ***OPTIONAL:***

- 1X Weatherproof retractable roof

## ***Step 1 Measuring and Preparation***

- Determine height for frame, from ground to suit person/person's who will be using the clothesline. We recommend installing it 50mm above head height for safety and ease of use.
- Remove the washing line from the packaging.
- Make a mark to create the reference point where the first hole of the left or right washing line bracket will be located. Make sure all fixings are into solid brick not mortar.
- Drill a hole to accept the masonry screw to a depth of 100mm with a 6mm diameter masonry drill bit.
- Ensure the wall mounting brackets are locked in place in the fully unfolded position with the thumb-screws in place as they were when the frame was packaged.
- Elevate the washing line in position and drive the first fixing through the top left or right wall bracket hole. Do not tighten fully so the frame can be pivoted to mark top hole on the opposite wall bracket.

## ***Step 2 Install remaining three fixings***

- Using the fixing installed in Step 1 pivot the frame to horizontal position and mark out the remaining 3 fixing points. Use a spirit level to ensure a level fit.
- Drill 3 holes to accept the remaining three masonry screws. Again to a depth of 100mm with a 6mm diameter masonry drill bit. Ensure these are fixed into brick not mortar.

## ***Step 3 Mount the washing line***

- Pivot the washing line on the first fixing to align the wall bracket holes with the mounting holes.
- Drive the remaining three fixings and tighten all of them so the washing line is secure.
- Remove the thumbscrews which came preinstalled with the washing line so it can move freely.

## ***Step 4 Check your installation***

- Ensure the washing line unfolds and folds into place securely, is free from snags and the fixings will hold when washing is hung out.
- To unfold the washing line swing it upwards by 90 degrees so it is perpendicular to the wall or fence where it is installed. Push it towards the wall or fence until it cannot be slid further. This will lock the washing line in place. Before letting go ensure it is locked in place securely

***VISIT OUR WEBSITE FOR MORE INFORMATION***